



Short Documentation

EQTrace click ATS



28.11.2024



Inhaltsverzeichnis

1. Introduction	3
2. Charging station	3
3. Status messages	3
4. Theft Alarm	3
5. Anti-theft settings	3
6. Pay-per-use options	4
7. Technical data	4
8. Necessary accessories	4
9. Scope of delivery	4
10. Contact and help	5



1. Introduction

This guide describes the EQTrace click ATS installation. Please notice that the EQTrace click ATS must be switched on for the installation. Please follow the instructions in „Charging station“.

2. Charging station

The charging station is used both to charge the EQTrace click ATS and to set the desired anti-theft settings.

In order to be able to set an EQTrace click ATS as desired, set the device before you install it, briefly (approx. 10 seconds) on the charging station.

After leaving the charging station, the EQTrace click ATS tries to connect to the Obserwando server and stays in contact with the server for about 5 minutes.

Within these 5 minutes the anti-theft settings can be adjusted in the Obserwando Portal. The settings can be changed at any time during operation. They will then be adopted with the next status message.

3. Status messages

After a work assignment, a status message about the current battery charge level is sent within the next 24 hours. If there is no work assignment (weekend, end of rental period, winter break), the status report is sent once a week.

4. Theft Alarm

If a theft is detected, the alarm messages are sent via email, SMS (optional) or phone call (optional).

5. Anti-theft settings

In the Obserwando portal you can set the anti theft settings for the work area and the rest area. You can also set the daily alarm times here.

6. Pay-per-use options

The pay-per-use features are optional options that you only pay for when you use them. This usually only occurs when a mobile machine has been stolen from you.

Pay-per-use options include:

- Position retrieval
- Online tracking
- Theft notification via SMS
- Theft notification via call

The pay-per-use options can be found in the Obserwando portal: „Set up machines - Additional services“.

7. Technical data

Operating voltage:	Supply via built in battery
Inputs:	1 virtuel
Protection:	IP68
Temperature range:	-20°C - +70°C
Housing dimensions:	L*B*H (mm) = 112 * 68 * 19,2
Transfer procedure:	LTE in germany with national Roaming (D1/D2/O2)

8. Necessary accessories

- Charging station (item no. 46000106)

9. Scope of delivery

1. EQTrace click



10. Contact and help

Do you need help or have a question?
Then you can reach us at the following contact details:

Rösler Software-Technik Entwicklungs- und Vertriebsgesellschaft mbH

Phone: +49 (0) 421/8022700

E-Mail: info@minidat.de

www.minidat.de